


RUTGERSON


Rutgerson Rubber change
for Genua traveller
manual - English



1. Unscrew the Allen key stop screw.

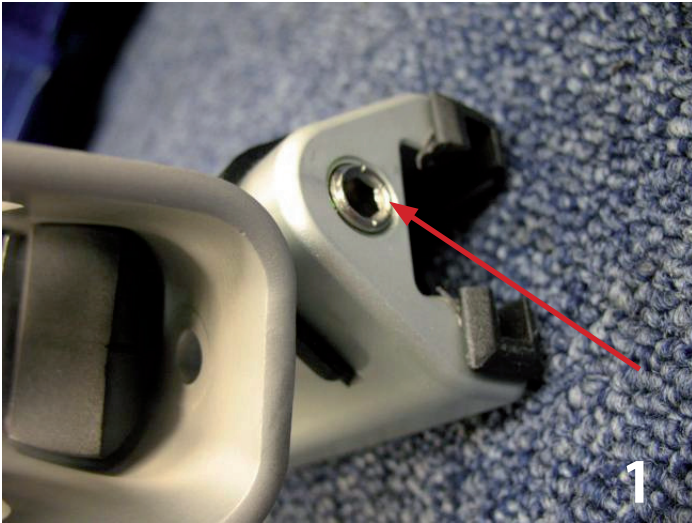

2. Tap the traveller gently on a wood (or "semisoft") surface. The axle that holds the upper part of the traveller should start to come out.

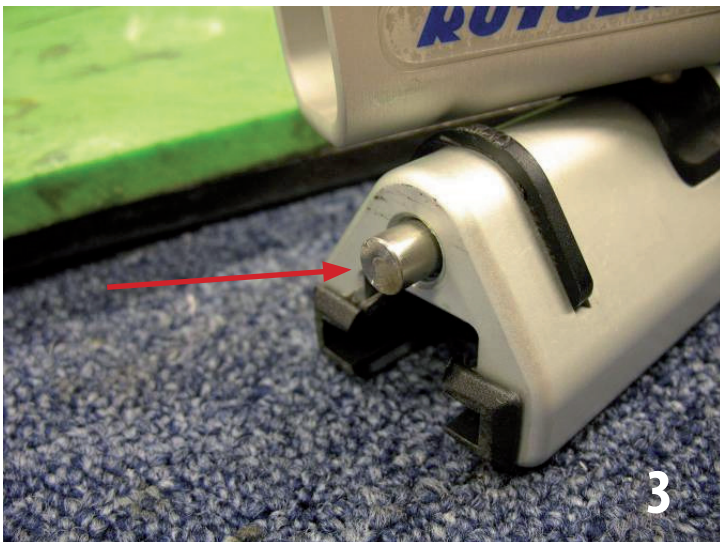

3. When it is out a few millimetres, try to pull it out with a pair of pliers. Change the rubber and mount the axle and the upper part.



4. Sometimes the axle gets stuck and won't come out. In case this happens you can take away the plunger or sheave and drill a 3 mm hole on the other side, opposite to the axle and use a punch to get it out.